



**VISTA
PROFESSIONAL
OUTDOOR
LIGHTING**

INSTALLATION AND OPERATORS GUIDE

for MT and CTS TRANSFORMERS and CONTROLS



CONSTANT POWER
True Constant Voltage
At All Terminals
Under Maximum Load

Made in the U.S.A.



UL 1838

Pool and Spa Ready

Suitable for use with submersible luminaires or submersible pumps

SEE INSTRUCTIONS

FEATURES AND CONTROLS	1	TC-112 TIMER SETTING PROCEDURE	4
MOUNTING INSTRUCTIONS	2	DTC-170 DIGITAL TIMER SETTING PROCEDURE	4
INPUT MODIFICATION FOR POOL AND SPA AREA USE	2	TIMER REMOVAL AND REPLACEMENT	4
TRANSFORMER SIZING	2	INSTALLATION OF FIELD INSTALLED PHOTOCELL	4
LOW VOLTAGE CABLE LENGTH	2	TIMER SETTING PROCEDURE WITH FIELD INSTALLED PHOTOCELL	4
12 VOLT CABLE LAYOUT OPTIONS	3	ELECTRONIC TIMER AND REMOTE PHOTOCELL	4
CABLE CONNECTION DETAIL	3	LOW VOLTAGE DIMMER	4
OUTPUT ADJUSTMENT SWITCH	3	LED POWER INDICATORS	4
MULTI-TAP INSTALLATION	3	ADJUSTABLE CABLE RACEWAY FEEDER (ACRF)	4
REMOTE PHOTOCELL CONTROL FUNCTIONS FOR RP MODULE	3	TROUBLESHOOTING CHECKLIST	4

FEATURES AND CONTROLS

1. Take-apart stainless steel hinges

The door can be removed for greater access to wiring compartment during installation. To remove, open door and lift straight up and off of hinges. To replace, line up door hinges over pins of housing hinges and carefully push down.

2. Operating instructions inside door.


Refer to these instructions for additional information on wiring to the transformer.

3. Magnetic overload circuit breakers

For reliable automatic secondary circuit protection. Circuit breakers may also be used as on/off rocker switches.

4. Output power LED indicators

Red LED indicators are illuminated when output power is available at the terminals.

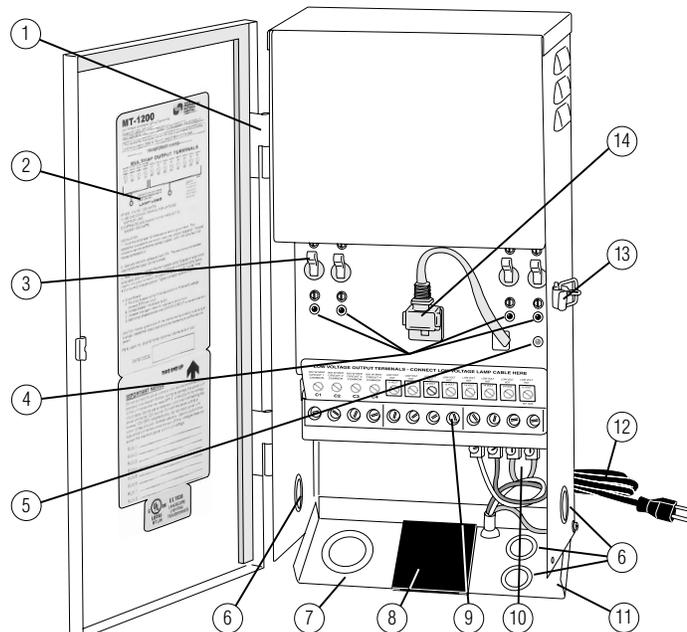

5. Input power LED indicator

Green LED indicator is illuminated when input power is supplied to the transformer.

6. 1/2"– 3/4" knockouts

for conduit and accessory mounting.

7. 1 1/4"– 2" knockout

for conduit and accessory mounting.

8. Adjustable Cable Raceway Feeder (ACRF)

ACRF in the center of the bottom tray allows for easy entrance of multiple low voltage cables during installation. Semi-rigid feeder cover slides out and can be cut with a saw, utility knife, or heavy snips to create a custom

opening for incoming cabling. Note: when inserted, make sure front edge of cover remains flush with front edge of enclosure in order for the transformer door to close securely

9. Terminal strip

for multiple low voltage cable connections. Cover flap opens to color coded voltage taps.

10. Accessory terminal strip

For easy installation of optional photocell, motion sensor, or other external switching devices.

11. Collapsible, swing-down bottom tray

Bottom tray can swing-down for greater access to wiring compartment during installation. The tray is held in place with a hinge screw and a

retaining screw on each side of the transformer enclosure. Loosen the two retaining screws (nearer to the front of the enclosure on each side) and pull down on tray to open.

12. Power cord

6-foot, heavy-gauge, grounded, water-resistant power cord with integrally molded plug.

13. Lockable, stainless steel latch

Can be secured to prevent tampering.

14. 120-volt accessory receptacle

For use with optional, removable multi-setting mechanical (TC-112) 24-hour timer or electronic/digital (DTC-150) 7-day timer (with battery backup).

MOUNTING INSTRUCTIONS

WARNING: Transformers must be installed in accordance with the National Electrical Code (NEC) and local codes. Failure to do so will void the warranty and may result in serious injury and/or damage to the transformer.

1. Find a suitable, flat-surfaced location to mount transformer, taking in to consideration proximity to 120 volt AC power source.
2. Attach provided template to wall at desired height. (Should be mounted at least 1.5' from the ground for safe and convenient operation.)
3. Center punch and drill (with an appropriate bit size for the screws to be used) at crosshair marks on the template.
4. Using appropriate screws for the selected mounting surface, insert screws into predrilled holes deep enough to slip transformer keyhole slots over. (Make sure screws are of a load bearing quality.)
5. Hang transformer case securely over screws.

INPUT MODIFICATION FOR POOL AND SPA AREA USE

WARNING: According to the National Electrical Code (NEC) all fixtures in or within 10 feet of water (including waterfalls, ponds and other type of water features) must be powered by a pool and spa rated transformer. Vista Transformers meet this rating with the following modification. In addition to this modification, transformers must be installed in accordance with the National Electrical Code (NEC) and local codes. Failure to do so will void the warranty and may result in serious injury and/or damage to the transformer.

1. In order to shorten the transformer 120 volt input cord as required for use with pool and spa luminaires, first disconnect transformer from power source, then locate the cord's plastic strain relief bushing at the entry to the transformer enclosure. (An alternate way to satisfy the pool and spa requirement would be to "hard wire" or "conduit wire" the transformer

input. In this case, the input cord would be removed or disabled.)

2. Follow the steps below to detach the cord bushing from the transformer enclosure and move it down the cord so that only 3' of input cord remain between the enclosure and the end of the plug. Disconnection of the white, black and green leads from the transformer are not required during this process.

3. Using pliers or a flat bladed screwdriver, depress the clips holding the bushing to the square enclosure hole while pulling the cord from the bottom.

4. The bushing should now be free of the enclosure, but still clamped around the cord. With your flat bladed screwdriver, insert the blade opposite the clamp hinge point of the plastic strain relief bushing and carefully pry off, releasing the clip inside without damaging the bushing. The bushing clamp should now swing free of the cord.

5. Taking care to locate the large flange of the bushing toward the cord plug, re-clamp the bushing at the proper cord length of 3'. Channel-lock pliers should be used to apply adequate pressure for re-clamping the bushing.

6. Pushing the excess cord inside the enclosure through the square cord hole, snap the bushing into the hole. The modification is now complete. For a cleaner installation, the portion of the cord inside the enclosure can be cut and discarded. Make sure to leave enough cord inside the transformer wiring compartment to re-strip its jacket and leads for re-connection.

TRANSFORMER SIZING

Low voltage lighting systems require the use of a transformer to reduce the standard 120 volt power from ordinary household electricity to the 12 volt needed to power low voltage lamps. Transformers vary in size or capacity. The total lamp wattage (load) of all fixtures connected to one transformer must not exceed the wattage capacity of the transformer. Therefore, to determine the transformer size needed, simply add up the wattage of all lamps you plan to use +10% for cable & connection factor. (Low voltage cable and fixture connections add

hidden watts to your system.)

TRANSFORMER SIZE = TOTAL FIXTURE WATTS x 1.1

TIP: All low voltage connections must be tight and waterproof.

Select a transformer that matches as closely as possible your total lamp wattage. For example: if you have 13 fixtures all rated at 20 watts, you will need a 300-watt transformer (13 x 20 = 260 watts plus 10% = 286). If your total wattage is too great, either divide the total load between two transformers or use a more powerful model. Selecting a transformer with about 20% higher capacity than your total lamp wattage will allow for adding a fixture or two later.

LOW VOLTAGE CABLE LENGTH

In planning a low voltage system, it is necessary to consider the impact of voltage drop. Because of cable's inherent resistance, voltage drops along its length: the end-of-run lamps will be dimmer than those at the beginning. Since voltage drop is a function of cable length and cable size and total fixture wattage, voltage drop can be minimized in several different ways:

- Use multiple cable runs
- Use heavier gauge cable (8 or 10 gauge)
- Shorten cable lengths or runs
- Reduce wattage of individual fixtures
- Reduce the total number of fixtures on a run
- Use multiple transformers in different locations

Cable is measured by gauge. The lower the number, the thicker the cable and the more current it carries. Cable for low voltage lighting is available in three gauges: #12-2, #10-2, and #8-2. As noted, #8-2 gauge is the largest and is capable of carrying the most current. Refer to the Cable Length Guide below to estimate the maximum allowable cable length that will keep the farthest fixture from the transformer from becoming to dim (below 10.5 volts). In addition, your transformer's output options, the design of your lighting system and corresponding cable layout can help minimize voltage drop (see 12-Volt Cable Layout Options, Output Adjustment Switch, and Multi-Tap Installation sections).

TIP: Expect a voltage drop of greater than 1.5 volts when cable length is longer than

recommended. Use the formula below to calculate maximum cable length.

$$V_d = \frac{L \times W \times 2}{K_c}$$

V_d = Voltage drop in the section of cable, in volts

L = Length of the section of cable (one way distance), in feet

W = Total Watts carried by the section of cable for the lamps it supplies


K_c = 'Cable Constant', as follows:

Cable Size (AWG)	K_c
12	7500
10	11920
8	18960


12 VOLT CABLE LAYOUT OPTIONS:

TIP: Connect all lamps in parallel. EXAMPLE: Connect one side of each lamp to 'COM' terminal, the other side to '12V' terminal.

 
1. Straight run installation: Fixtures run in sequence directly from the transformer.




2. Loop installation: Fixtures are arranged in a looped circuit, reducing the effects of voltage drop.

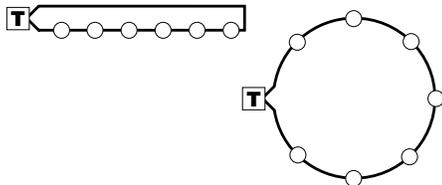

 3. Split load installation or multiple cable run: Fixtures run in two or more directions from the transformer. Locating the transformer in the center of the run reduces the effects of voltage drop.



4. "T" installation (RECOMMENDED): Allows more equal distribution of power to the center of the run, or to a run some distance away. Cable running from the transformer must be of a heavier gauge (#8 or #10).

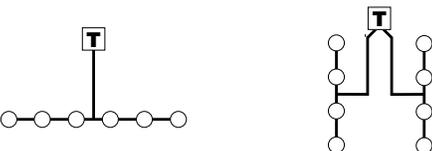


CABLE CONNECTION DETAIL

TIP: for proper connection, strip off 3/4" of cable installation, twist wire strands tightly and use

a high quality straight blade screwdriver 3/16" wide tip to tighten all screw terminals firmly.

TIP: 300 Watt units are single circuit, 600 Watt units are dual circuits, 900 Watt units are three circuits, and 1200 Watt units are four circuits. See installation instructions in transformer cover for single and multiple circuit output terminal details. All transformers have one manual reset circuit protector per circuit. Multiple circuit units must be equally loaded between circuits. For example: A 600 Watt transformer has two 300 Watt circuits. If a 250 Watt load is connected to circuit 1, a 250 Watt load must be also connected to circuit 2.

 
SINGLE CIRCUIT – 300 WATT




TIP: When using single circuit transformers, full rated load may be connected to one pair of 'COM 12V' terminals.

TIP: In a loop installation, low voltage polarity must be maintained by connecting the start and return of the first conductor to the 'COM' terminals, the other conductor to the '12V' terminals.


DUAL CIRCUIT – 600 WATT

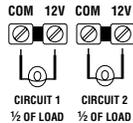

THREE CIRCUIT – 900 WATT

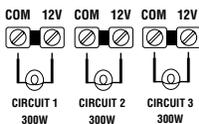

FOUR CIRCUIT – 1200 WATT

 

OUTPUT ADJUSTMENT SWITCH

CTS transformers come equipped with a 2-position output voltage switch. Set the switch using the following as a guide.

HIGH – The correct setting in most cases. Provides expected lamp life while maintaining good brilliance.

LOW – Increases lamp life when fixtures are located very near the transformer and/or when fixtures total less than 1/2 the transformer's rated wattage.


MULTI-TAP INSTALLATION

TIP: Multi-Tap transformers supply output voltage which exceeds 12 volts. Extreme care

must be taken during installation to avoid premature lamp burnout due to high voltage. Use of a voltmeter during installation is the only way to ensure a proper voltage at the fixture. As a guide when designing your job, expect a 2 volt drop for every 100 feet of 12-2 cable to which 200 Watts of evenly spaced fixtures are connected.

Refer to sample diagram. Connect one side of fixtures (common) up to 300 watts per circuit, using 12 gauge or larger direct burial cable. Strip 3/4" of cable insulation and twist wire strands tightly before insertion into transformer's output terminals. Each terminal will accept two #8, four #10, or 6 #12 wires. Tighten connector screws firmly. Retighten after one week of operation. Connect remaining side of fixtures to output tap according to your voltage needs. It is always best to connect your fixtures to the 12-volt tap first, then use a voltmeter to measure the AC voltage of the fixture nearest to the transformer. Subtract the measured voltage from 12 and add the result to determine your higher tap. Example: With fixtures connected to 12-volt tap, measured voltage at first equals 10. 12 volts required at fixture minus 10 volts measured equals a 2-volt difference. Add the difference to 12 in order to determine the appropriate tap to be used. (2 + 12 = 14)

SAMPLE MULTI-TAP CONNECTION 600 WATT MT TRANSFORMER WITH 2 CIRCUITS

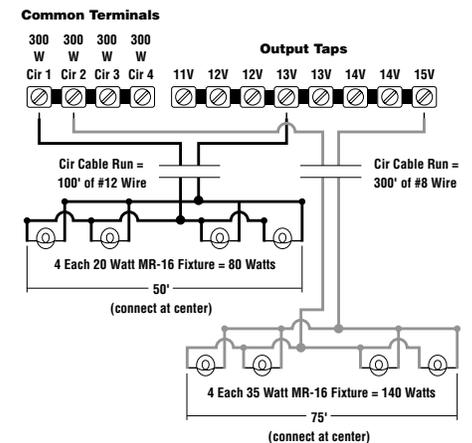

REMOTE PHOTOCELL CONTROL FUNCTIONS FOR RPM-100 MODULES

If not already pre-installed, insert RPM-100 into the 120-volt accessory receptacle, then insert 120-volt accessory plug into RPM-100 module.

Photocell Mounting:

1. Disconnect transformer from 120V service.
2. Mount photocell eye where exposed to sunlight.
3. Run photocell cable with plug end back to transformer enclosure.
4. Locate square shaped hole in enclosure bottom and feed plug through to socket marked 'PHOTOCELL INPUT'. Plug photocell in.
5. To test in daylight hours, apply input power to transformer and turn photocell control knob to desired setting.
6. Cover photocell eye completely so that no light enters. Transformer should turn on within a few seconds.


6. For normal operation, uncover photocell, turn knob to "OFF/RESET", then to your desired setting.

NOTE: Turn photocell control switch to OFF/RESET any time you need to cancel a timed cycle. Next, move switch to your new desired on time. Time period will restart when dark.

Timer Setting:

Timer does not require time-of-day setting or battery backup maintenance. It depends on the photocell 'darkness signal' to begin the 'on duration' cycle. It has six modes of operation.

- By moving the dial to one of the four 'on time' switches (2,4,6,8 hours), you tell the unit to turn on at darkness, begin timing, and turn off when the selected time period ends.
- With dial turned to 'DUSK TO DAWN', the timer never activates, allowing the unit to operate from dusk until dawn.
- To test your system during daylight hours, use 'ALL ON / TEST' to override the photocell and turn the system on. Whenever input power is applied to the transformer, the lights will remain on.

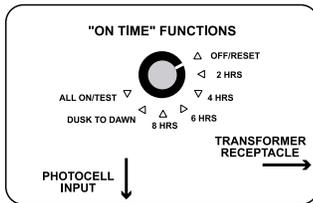

TC-112 TIMER SETTING PROCEDURE

1. Insert TC-112 into the 120-volt accessory receptacle, then insert 120-volt accessory plug into TC-112.
2. To set time 'ON': Insert green tripper pin(s) into dial at the approximate start time(s) desired.
3. To set time 'OFF': Insert red tripper pin(s) into dial at the approximate stop time(s) desired.
4. Turn the outer rim of the timer face clockwise until the arrow on the view window points to the current time of day.

NOTE: The numbers on the timer face correspond to the hours in a day.

DTC-170 DIGITAL TIMER SETTING PROCEDURE

TIP: Refer to enclosed instructions (included with timer) for comprehensive operating instructions.

Initial Operation:

1. Plug the timer into the Transformer 120-volt accessory receptacle and turn the power on. Leave for approximately 14 hours to charge the memory back-up battery.
2. Clear all current information by pressing **RESET** button with sharp object such as a pen or pencil after charging.
3. Proceed with setting procedures for current time and programming.


TIMER REMOVAL AND REPLACEMENT

When so equipped, the timer supplied with your new transformer is a removable (plug-in) style. Located inside the cover of the transformer enclosure, it can be pulled out and replaced with a new timer, remote photocell module, or remote control module. To replace a timer, simply grasp both sides of its plastic case and pull firmly. Next, remove the timer plug from the timer.

To install a new timer, insert timer plug into timer before plugging into transformer's timer receptacle.

INSTALLATION OF FIELD INSTALLED PHOTOCELL

1. Turn power off.
2. Select a location or mount the photo control so that artificial light doesn't cause the unit to turn off. Do not install the photo control so that it directly faces the midday sun. Take care to keep the photocell EYE free of obstructions.
3. The photo control can be mounted in any approved outdoor junction box or fixture.
4. Wire the photo control according to the illustration.

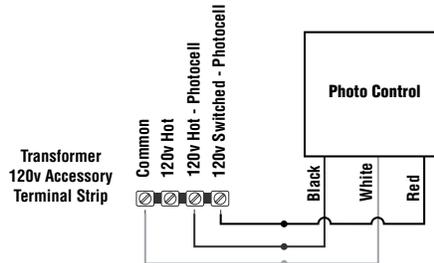

5. Switch power on. The controlled load should turn on regardless of whether you are installing the unit during the day or at night.
6. If it is daylight the control should switch off within a few minutes.

TIMER SETTING PROCEDURE WITH FIELD INSTALLED PHOTOCELL

The combination timer and photocell is designed for photocell-on, timer-off operation.

1. Set ON TIME during daylight hours - 2 PM or so.
2. Set OFF TIME at desired off time.
3. Set timer dial to the current time of day.

EXAMPLE: For on at dusk, off at 12 PM, PUSH DOWN all 40 pins between 2 and 12 PM.

TIP: It is normal for the transformer to temporarily turn on during daylight at the timer on setting. Approximately 5 minutes is required for the photocell to stabilize and turn the unit off.

TIP: When equipped with plug-in timer and photocell, normal operation requires uninterrupted 120 volt power.

LOW VOLTAGE DIMMER

Vista transformers are ready for use with a low

voltage system (*inductive load*) dimmer. When wired in the 120 volt line, the dimmer will allow you to adjust different levels of lamp brilliance. Your transformer will not work with any dimmer not specifically designed for low voltage systems. A dimmer can be installed at the 120v Accessory Terminal.

LED POWER INDICATORS

Red LED power Indicators are located on the inside panel below each respective circuit breaker to facilitate troubleshooting on the secondary, while an additional green LED is present to facilitate troubleshooting on the primary. The red LED indicators are illuminated when output power is available at the terminals. The Green LED indicator is illuminated when input power is supplied to the transformer.

ADJUSTABLE CABLE RACEWAY FEEDER (ACRF)

ACRF in the center of the bottom tray allows for easy entrance of multiple low voltage cables during installation. Semi-rigid feeder cover slides out and can be cut with a saw, utility knife, or heavy snips to create a custom opening for incoming cabling. Note: when inserted, make sure front edge of cover remains flush with front edge of enclosure in order for the transformer door to close securely.

TROUBLESHOOTING CHECKLIST

Although low voltage lighting systems operate with a minimum of maintenance, occasionally some problems will occur. Here are solutions to some of the most common problems.

- I. Entire system will not operate
 1. Check 120-volt outlet to ensure you have power to outlet.
 2. Check or reset circuit breakers on transformer.
 3. Check low voltage cable connection at transformer.
 4. Check transformer alone by disconnecting low voltage cable from output terminals, bypassing timer and/or photocell as explained previously, and checking Input and Output power LEDs for power on status (lit).
- II. System operates for 15 minutes, and then turns off.
 1. Timer incorrectly set. See setting procedure.
- III. Circuit breaker on transformer trips
 1. Check end of cable to ensure copper strands are not touching.
 2. Check connection of cable at transformer to ensure copper strands are not touching.
 3. Recalculate total wattage to ensure that you have not exceeded rated wattage of transformer.
 4. Check for other shorts at fixture connection points.

If you have a concern or problem with any Vista product, first contact your local distributor. For continuing or unresolved problems, contact factory technical department at (800) 766-8478 between 8:00am and 5:30pm PST, Monday through Friday.