

INSTALLATION INSTRUCTIONS

WARNING: Above ground ballast box must be installed and grounded in accordance with the National Electrical Code (NEC) and local codes. Failure to do so will void the warranty and may result in serious injury and/or damage to the ballast.

MAINTENANCE: To assure proper operation and efficiency and to prevent ballast overheating, ballast box must be kept clean and free of dirt, dust, leaves, trash and mineral deposits from water. A regular schedule maintenance program is recommended.

NOTE: Always use UL Listed wire connectors for connections.

NOTE: Save these instructions for future reference.





TOOLS REQUIRED FOR INSTALLATION:

- Wire strippers
- Phillips head screwdriver
- Flat head screwdriver

BALLAST MOUNTING:

1. Find a suitable, flat-surfaced location to mount ballast, taking into consideration proximity to 120-volt AC power source (GFI if applicable). Ballast box mounts vertically on the wall, structure, or post with the conduit entries positioned downward.
2. Using appropriate screws for the selected mounting surface, insert screws into predrilled holes deep enough to slip ballast keyhole slots over.
3. Hang ballast case securely over screws.
4. Open cover. Connect primary leads, check for proper voltage, connect input leads to terminals marked Line & Common.
5. Be sure ground wire is properly connected.
6. Connect secondary side using terminals marked Lamp & Common.
7. Close cover.

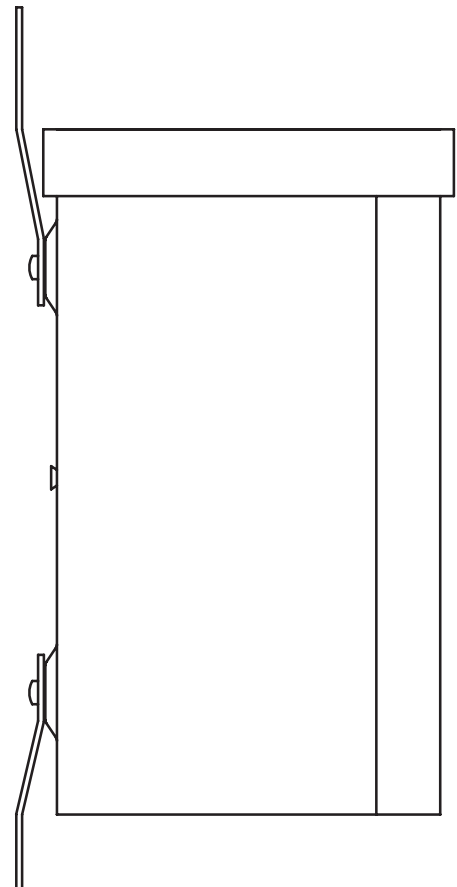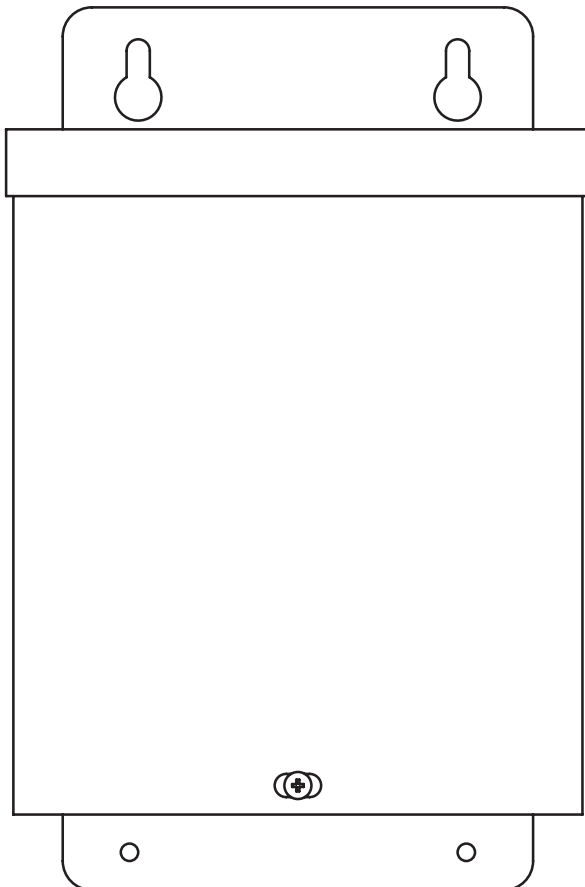

Vista Professional Outdoor Lighting reserves the right to modify the design and/or construction of the fixture shown without further notification.