

INSTALLATION INSTRUCTIONS

IMPORTANT NOTE:

- Luminaire must be installed and grounded in accordance with the National Electrical Code (NEC) and local codes.
- Luminaire is UL listed for above grade installation only.
- Always use UL recognized wire connectors for connections.

MAINTENANCE: To assure proper operation and efficiency and to prevent luminaire overheating, lens must be kept clean and free of dirt, dust, leaves, trash and mineral deposits from water. A regular schedule maintenance program is recommended.


SAFETY WARNING: Luminaire can become very hot depending on the lamp wattage used. Lens and housing around the lamp can become hot enough to blister hands. Particular care should be taken not to locate luminaires where small children can reach them if high wattage lamps are used

NOTE: Save these instructions for future reference.

LUMINAIRE MOUNTING (Infinity Knuckle):

- 1. Make sure electrical supply is off at circuit breaker before starting luminaire installation or servicing luminaire.
- 2. Thread stainless steel knuckle stem onto junction box or other mounting device using thread sealant.
- 3. Route luminaire supply conductors through stainless steel knuckle stem and seat luminaire onto stainless steel knuckle stem.
- Attach luminaire supply conductors to line-in leads observing polarity, black to black and white to white using silicone filled safety connectors (provided).
- Attach junction box cover with luminaire to junction box (by others).
 Make sure not to pinch wires that may be sandwiched between cover and box.

- 6. Coat exposed luminaire threads with thread sealant to keep moisture from entering junction box or other mounting device.
- 7. To adjust luminaire aiming angle, loosen adjustable knuckle screw. Do not disengage completely. Hold luminaire at selected angle and tighten knuckle screw firmly.
- 8. To adjust luminaire rotational direction, loosen rotational adjustment screw. Rotate fixtureto desired position then tighten rotational adustment screw.
- 9. Coat all exposed screws with silicone grease.
- 10. Supply power to the luminaire and check for proper operation.

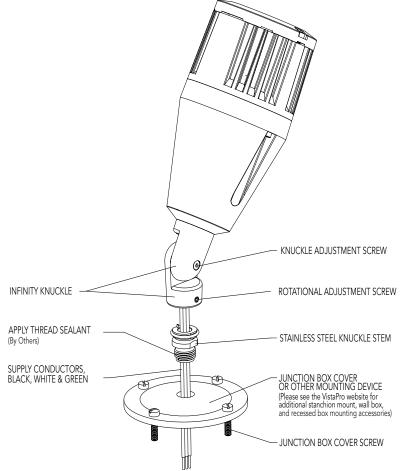

Vista Professional Outdoor Lighting reserves the right to modify the design and/or construction of the fixture shown without further notification.