




## INSTALLATION INSTRUCTIONS

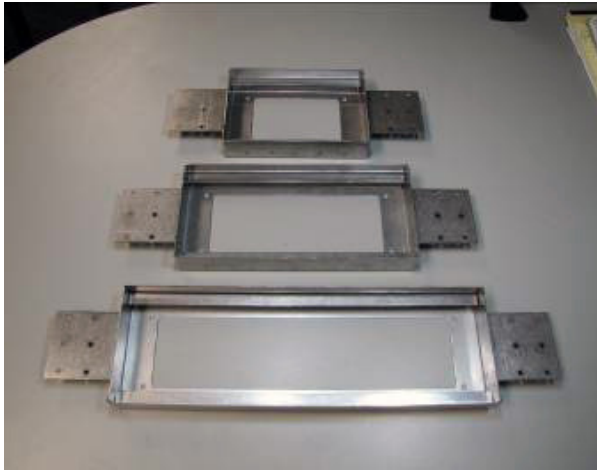

Flush tray subassemblies for the Glass Border version of 1500 Series steplight.



STEP 1 - Pour the RIS into concrete wall, making front surface of tray flush with form.



STEP 2 - Once concrete is dry, remove form.



STEP 3 - Remove MDF pour support plate.



Flush trays shown with pour support plates removed.



STEP 4 - Remove temporary cover plate label.

*Vista Professional Outdoor Lighting reserves the right to modify the design and/or construction of the fixture shown without further notification.*



## INSTALLATION INSTRUCTIONS

---



Flush trays shown with temporary cover labels removed.



STEP 5 - Remove internal support plate.



STEP 5 - Remove internal support plate - 2nd photo.



STEP 6 - Remove vertical pour support plate.



STEP 7 - Install Performance Optic Package (PoP).



STEP 8 - Install Glass Border door assembly (GaS).

*Vista Professional Outdoor Lighting reserves the right to modify the design and/or construction of the fixture shown without further notification.*