



IMPORTANT NOTE: Luminaire must be installed and grounded in accordance with the National Electrical Code (NEC) and local codes. All conduit entries must be sealed from moisture. Use appropriate sealing material on conduit fittings and conduit closure plugs. Luminaire is wet location listed and suitable for in-grade mounting in concrete or other supportive surface materials (including soil).

WARNING: Debris must be kept clear from top and interior of in-grade fixtures. Excessive heat could occur that may create a fire hazard and/or harm the fixture components. Specific attention must be made to never install in-grade fixtures in mulch, wood chips, or other potentially ignitable materials. Failure to do so will void warranty and may result in serious injury and/or damage the fixture and/or property.

MAINTENANCE: To assure proper performance, the lens/openings must be kept clear of debris, dirt, leaves and trash. A regular schedule maintenance program is recommended.

NOTE: Save these instructions for future reference



CONCRETE POUR INSTALLATION


IMPORTANT NOTE: Temporary Cover plate and Vinyl Label must remain in place during Rough-In Section (RIS) installation.

PRECAUTION: Adequate drainage must be provided during installation. It is recommended the luminaire be surrounded by 3" to 4" of pea gravel along the sides and minimum of 6" of pea gravel at the bottom and beneath the luminaire housing. Top of the luminaire must be FLUSH with finished grade.

1. To prevent electrical shock, turn main power off at circuit breaker.
2. Dig a hole approximately 12" in diameter to a depth suitable to make top of temporary cover plate FLUSH with finished grade. Pea gravel is required for seating the luminaire housing and providing necessary drainage.
3. Connect conduit to housing. It is recommended to use UL listed outdoor rated flexible conduit for in and out connections to ensure water tightness of splices.

IMPORTANT NOTE: If conduit, of the rigid metallic type, is connected to the enclosure housing, the hub (by others) shall be connected to the conduit before the hub is connected to the enclosure housing.

4. Plug and unused NPT holes with closure plugs (provided).
5. Position fixture within the hole and back fill with pea gravel. The uppermost layer, 6" minimum, should be left for poured concrete.
6. To keep housing from floating during the concrete pour, the Rebar Mount Bracket (RMB) accessory should be used to affix the housing to wire/rebar grid using standard masonry methods.
7. To pull supply conductor wiring, first remove and retain the Temporary Cover Plate and Plate Screws by piercing through the label at the screw locations to access the screws.
8. Pull electrical supply wires (line in) through conduit opening. Stuff the wire loop back through the conduit opening (line out).
9. Reinstall the Temporary Cover Plate and Vinyl Label using the cover screws.
10. Pour the concrete at least 3" thick. Trowel concrete so it is even with the vinyl label. Allow concrete to cure.

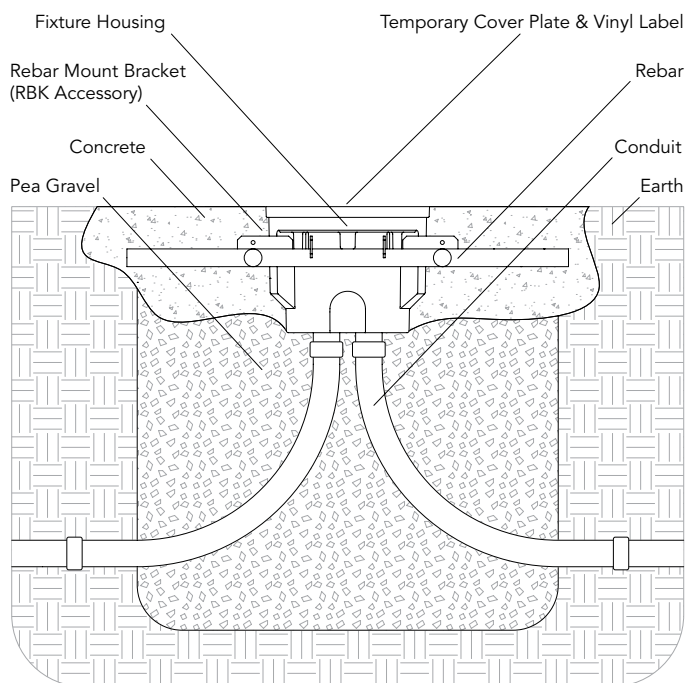



IN-GRADE SOIL INSTALLATION


IMPORTANT NOTE: Temporary Cover plate and Vinyl Label must remain in place during Rough-In Section (RIS) installation.

PRECAUTION: Adequate drainage must be provided during installation. It is recommended the luminaire be surrounded by 3" to 4" of pea gravel along the sides and minimum of 6" of pea gravel at the bottom and beneath the luminaire housing. Top of the luminaire must be above grade so rain and irrigation water will not accumulate for long periods of time.

1. To prevent electrical shock, turn main power off at circuit breaker.
2. Dig hole approximately 12" wide to a depth suitable to make top of Temporary Cover Plate $\frac{3}{4}$ " above grade. Pea gravel is required for seating the luminaire housing and providing necessary drainage.
3. Connect conduit to housing. It is recommended to use UL listed outdoor rated flexible conduit for in and out connections to ensure water tightness of splices.

IMPORTANT NOTE: If conduit, of the rigid metallic type, is connected to the enclosure housing, the hub (by others) shall be connected to the conduit before the hub is connected to the enclosure housing.

4. Plug and unused NPT holes with closure plugs (provided).
5. Position fixture within the hole and back fill with pea gravel. Only the uppermost layer, 3" maximum, should be soil or organic mulch.
6. To pull supply conductor wiring, first remove and retain the Vinyl Label and Temporary Cover Plate. Retain the Temporary Cover Plate screws.
7. Pull electrical supply wires (line in) through conduit opening. Stuff the wire loop back through the conduit opening (line out).
8. Using the cover screws, reinstall the Temporary Cover Plate and Vinyl Label.

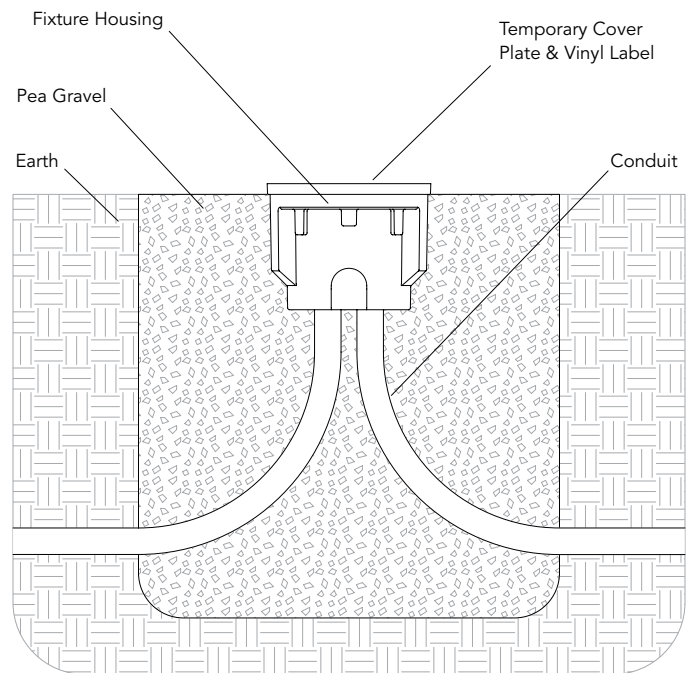

INSTRUCTIONS TO REMOVE LAMP MODULE

1. To prevent electrical shock, turn main power off at circuit breaker.
2. Remove Vinyl Label and Temporary Cover Plate. Recycle or discard Cover Plate.

NOTE: If a Stainless Steel Trim Ring (STR) is to be used, follow the supplementary instructions supplies with STR accessory.


3. Using silicon filled wire nuts (provided), connect the Supply Conductors from the incoming service to the load conductors of the COB Module noting the following polarity:

Supply (+) to Load (Black)
Supply (-) to Load (White)
Supply (Ground) to load (Green)

If 0-10V dimming is used:

Dimming supply (+) to Dimming Load (Purple)
Dimming supply (-) to Dimming Load (Grey)


4. Ensure that the peripheral sealing surface of the Rough-In Section housing is clean & free of debris. Wipe clean with a moist cloth or towel if necessary.
5. Fully insert the COB Lamp Module into the Rough-In Section, taking care not to pinch any supply conductors or dislodging the Lamp Module Peripheral Seal Gasket.
6. Tighten the two captive module screws fully. **DO NOT OVERTIGHTEN.**
7. Supply power to the luminaire and check for proper operation

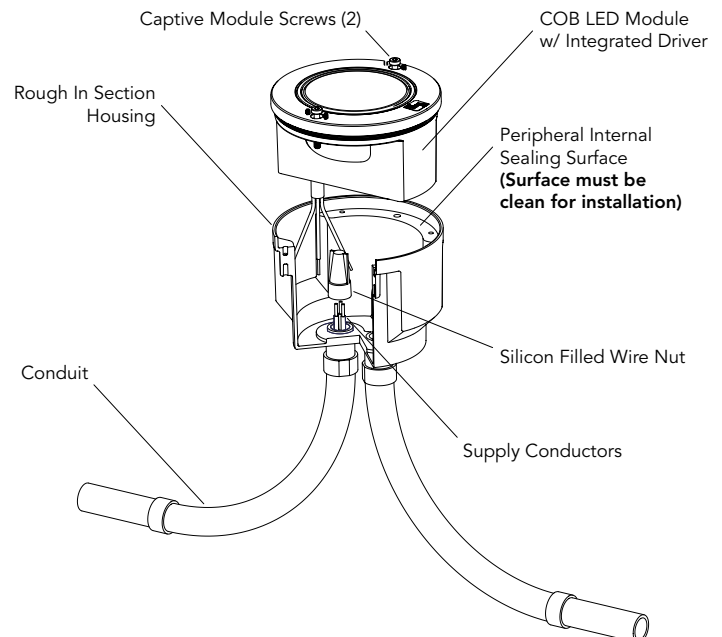




MAGNETIC AIMING INSTRUCTIONS

1. Install the fixture per installation instructions provided.
2. With the fixture on, place the tip of the adjusting magnetic card (supplied when a tilt optic option is ordered) against the glass lens over the circular indicating mark.
3. Rotate the adjustment card to the desired aiming position. The tilt optic will rotate within the fixture as long as the magnet on the adjustment card is against the glass lens.
4. Once aimed correctly, remove the adjusting magnetic card.

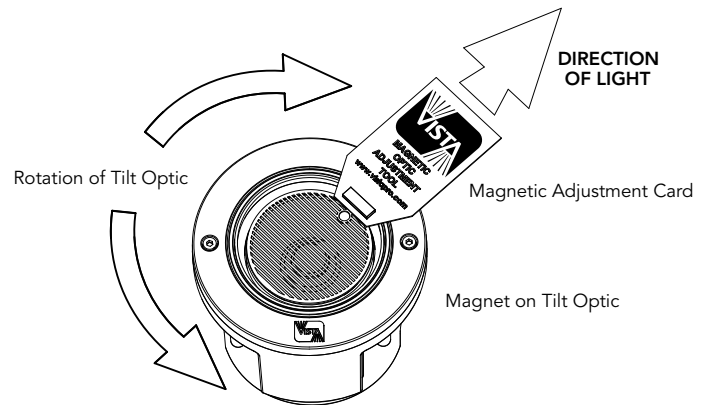

INSTRUCTIONS TO REMOVE LAMP MODULE

1. Completely loosen and lift up on the 2 screw heads of the lamp module.
2. Pass the 2 screw heads through the holes in the lamp module puller and hook the screw heads into the narrow slots of the puller.
3. To remove the lamp module, position your feet on both sides of the fixture and firmly lift straight up (Do not turn).

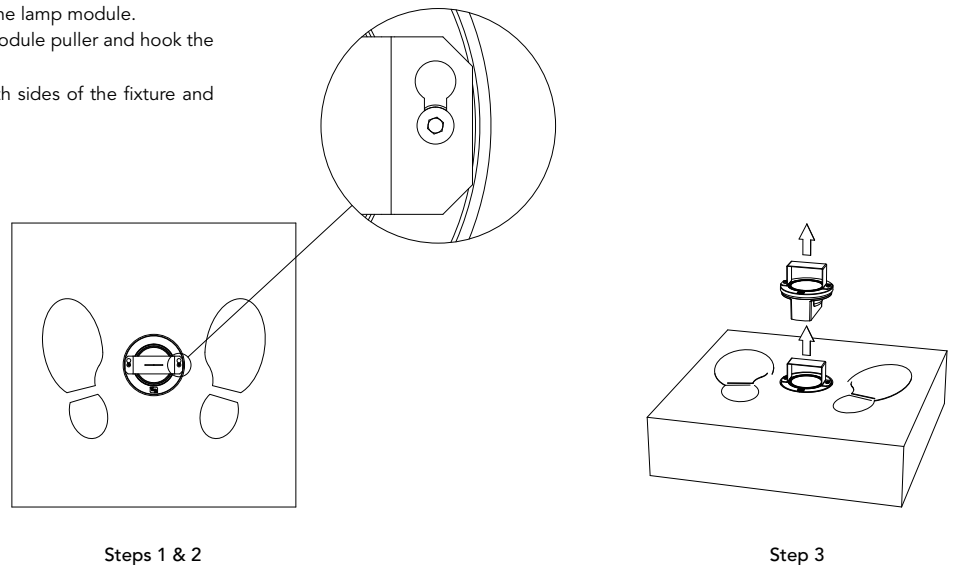

1182 LAMP MODULE PULLER

Retain for future use to remove lamp module from fixture housing.

